


VELUX®

VELUX INTEGRA® KLF 200

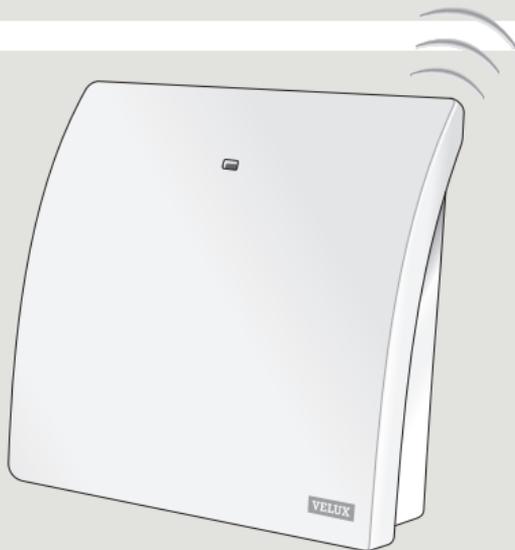

VELUX INTEGRA®



Directions for use

ENGLISH



VAS 454288- 2021-03

Two instructions are supplied with the interface (**A** and **B**).



Set-up via a VELUX INTEGRA® control

These instructions will help you set up the interface with a VELUX INTEGRA® one-way or two-way control. The instructions contain the default settings and functions that can be seen in the table of contents on the next page.



Set-up via tablet, computer or smartphone

This instruction leaflet will help you set up the interface via a tablet, computer or smartphone and enable more advanced interface settings.

Congratulations on your new VELUX INTEGRA® product!

Thank you for buying this VELUX INTEGRA® product.


The product can be used as an interface or as a repeater.

The interface function is used when io-homecontrol® products are to be controlled via external control devices that are not io-homecontrol® compatible.

The repeater function is used if you want to extend the operation range of controls in the system by transmitting received wireless commands.


Contents of packaging	4
Product overview	5
Default settings	5
Important information	6-7
Function as interface	
Function of inputs	8-10
Registration of products	11
Registration with VELUX INTEGRA® two-way control pad KLR 200	12-16
Registration with VELUX INTEGRA® one-way control	17-19
Function of outputs	20
Resetting	21
Function as repeater	22-24
Own notes	26-27

Contents of packaging

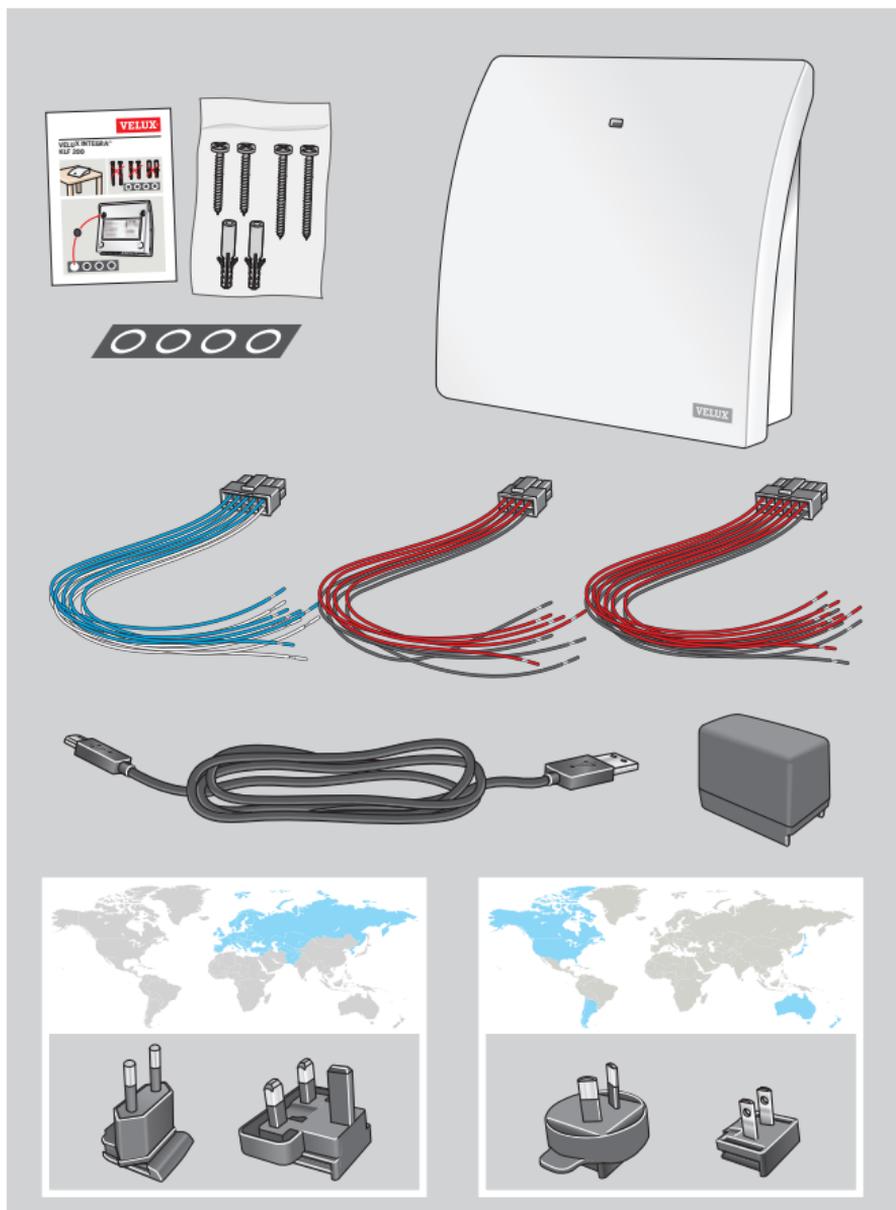

Product overview

- ① Light-emitting diode
- ② ETHERNET/service (for internal use only)
- ③ Power supply
- ④ Key button
- ⑤ RESET
- ⑥ Outputs
- ⑦ Inputs

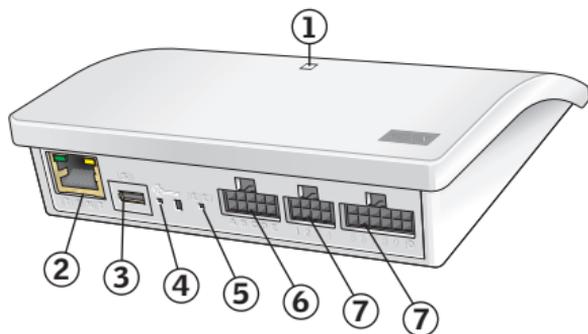

Default settings

Inputs (control)

An external control signal shorter than 1.5 seconds makes the VELUX product travel to end position.

- Even inputs (2, 4, 6, 8) are used for close/down: The product travels to end position
- Odd inputs (1, 3, 5, 7) are used for open/up: The product travels to end position

An external control signal longer than 1.5 seconds makes the VELUX product travel until the signal stops or until the product has reached end position.

Default speed is used for all window operators including those supporting silent mode.

As default, io-homecontrol® channel 3 is used for communication and no channels or signals are blocked.

Outputs (signals)

The output relay is activated for 2 seconds when an action has been successfully executed.

The default settings can be adjusted by using the web interface.

See enclosed instruction leaflet **B**.

Important information



Read instructions carefully before installation and operation. Please keep instructions for future reference and hand them over to any new user.

Safety

- VELUX INTEGRA® interface KLF 200 can be used by persons (aged 8 years and above) with sufficient experience and knowledge if they have been given instruction concerning safe use and understand the hazards involved. Cleaning and user maintenance must not be done by unsupervised children.
- Children must not play with the interface.
- The interface, adaptor plug and cable are for indoor use only.
- The interface must not be covered (maximum ambient temperature: 50 °C).
- The interface must be installed at a height below 2 m from floor level.
- If the adaptor plug and/or cable is/are damaged, it/they must be replaced.

Product

- The interface is based on two-way RF (radio frequency) communication and marked with the symbol . This symbol can be found on the data label.
- Cables from the interface input must not exceed 100 m.
- Radio frequency band: 868 MHz (io-homecontrol®), 2.4 GHz (WiFi 802.11 b/g/n).
- Radio frequency range: 300 m free field. Depending on building construction, the indoor range is approx. 30 m. However, constructions with reinforced concrete, metal ceilings and plaster walls with steel members may reduce the range.
- The packaging must be disposed of in accordance with national regulations.
-  The product, including batteries if any, is regarded as electrical and electronic equipment and contains hazardous materials, components and substances. The crossed out wheeled bin symbolises that electrical and electronic equipment waste must not be disposed of together with household waste. It must be collected separately at recycling stations or other collection sites or retrieved directly from households to increase the possibilities of recycling, reuse and utilisation of electrical and electronic equipment waste. By sorting electrical and electronic equipment waste with this symbol, you contribute to reducing the volume of incinerated or buried waste and to reducing any negative impact on human health and the environment. Further information can be obtained from the local municipality's technical administration or from your VELUX sales company.

Important information

• Maintenance

- If repair or adjustment work is needed, disconnect any power supply and ensure that it cannot be reconnected unintentionally.
- The interface requires a minimal amount of maintenance. The surface may be cleaned with a soft, damp cloth.
- Spare parts are available from your VELUX sales company.
- If you have any technical questions, please contact your VELUX sales company, see telephone list or www.velux.com.



io-homecontrol® provides advanced and secure radio technology that is easy to install. io-homecontrol® labelled products communicate with each other, improving comfort, security and energy savings.

www.io-homecontrol.com



Declaration of Conformity

We herewith declare that VELUX INTEGRA® interface KLF 200 (3LF D03 WW/BE-RC009-02)

- is in conformity with the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU, the Radio Equipment Directive 2014/53/EU and the RoHS Directive 2011/65/EU,
- has been manufactured in accordance with the harmonised standards EN 62368-1(2014), EN 55032(2014), EN 55024(2010), EN 301489-1, EN 301489-3, EN 300220-2, EN 300220-1, EN 300440-2, EN 300440-1 and EN 300328 and
- has been assessed in accordance with the harmonised standard EN 50581(2012).

VELUX A/S:

(Jens Aksel Thomsen, Senior Certification Specialist)

Ådalsvej 99, DK-2970 Hørsholm 21.01.2021

CE DoC 940409-01

Important information

UK CA Declaration of Conformity

We herewith declare that VELUX INTEGRA® interface KLF 200 (3LF D03 WW/BE-RC009-02)

- is in conformity with the Electrical Equipment (Safety) Regulations 2016 (S.I. 2016/1101), the Electromagnetic Compatibility Regulations 2016 (S.I. 2016/1091), the Radio Equipment Regulations 2017 (S.I. 2017/1206) and the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012/3032),
- has been manufactured in accordance with the UK designated standards EN 62368-1(2014), EN 55032(2014), EN 55024(2010), EN 301489-1, EN 301489-3, EN 300220-2, EN 300220-1, EN 300440-2, EN 300440-1 and EN 300328 and
- has been assessed in accordance with the UK designated standard EN 50581(2012).

On behalf of our local representative:

VELUX Company Ltd.

Woodside Way, Glenrothes East, Fife, KY7 4ND

United Kingdom

VELUX A/S:
(Jens Aksel Thomsen, Senior Certification Specialist)

Ådalsvej 99, DK-2970 Hørsholm 21.01.2021

DoC 940409-01


Function as interface

Function of inputs


Function as interface is used when io-homecontrol® products are to be controlled by external control devices that are not io-homecontrol® compatible.

The inputs on the interface must be connected to control devices with potential free contacts. When the potential free contact is activated, the interface sends a wireless command to the io-homecontrol® products to be operated. It is possible to operate a single product or a group of products (up to 200 products in total).

The window can also be operated with the wireless control, if preferred.

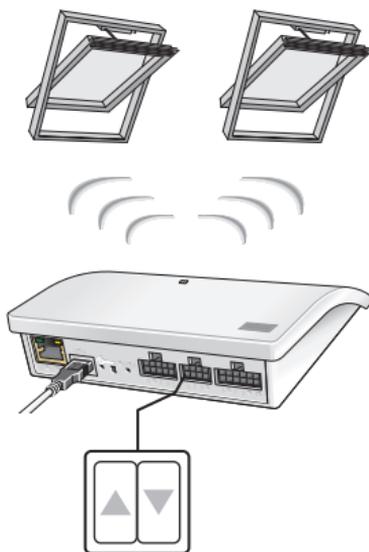

Individual control of a product or a product group requires a double input per product or product group, ie input 1 and 2 belong together, input 3 and 4, input 5 and 6 etc. This means that up to five products or product groups can be configured.

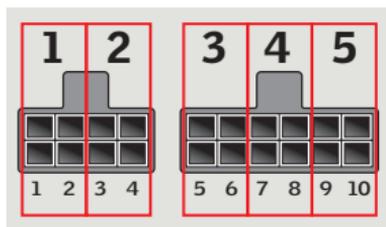


Function as interface


Function of inputs

Standard setting of inputs:


OPEN/UP/ON is controlled by connecting 1  and .

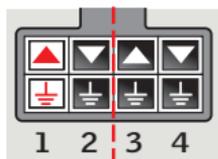

CLOSE/DOWN/OFF is controlled by connecting 2  and .

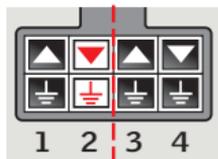

STOP is controlled by connecting both 1  and 2  and .

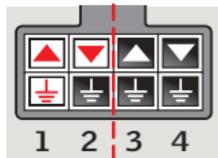


The top rows in the **INPUT** terminals are signal  / . The bottom rows in the **INPUT** terminals are common ground .

Thermostatic control of a VELUX roof window by a non io-homecontrol® compatible thermostat

A thermostat can be used for controlling automatic opening and closing of windows depending on the temperature. A typical thermostat works by means of a potential free change-over contact that switches between two positions depending on the ambient temperature.

A thermostat set to 22 °C will typically change positions (ie open the window(s)) when the temperature rises above 23 °C, and switch back (ie close the window(s)) when the temperature has again fallen below 21 °C.

The window can also be operated with the wireless control, if preferred.

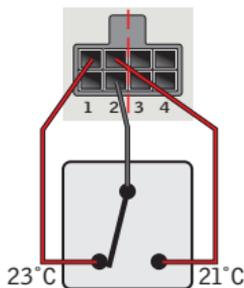


Function as interface

Function of input


A single contact can be used for running products either up or down, for instance for a blind.

Short press (under 1.5 seconds): The product will run to end position.


Long press: The product will run until the key is released.

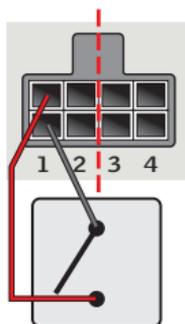

A set of two contacts can be used for running products both up and down with variable stops by pressing both contacts simultaneously.

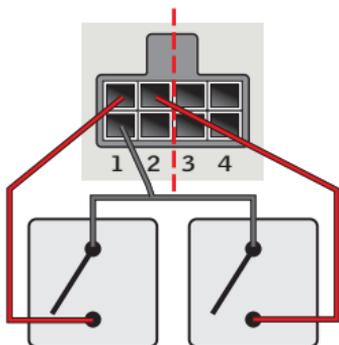

A change-over contact can also be used for running products both up and down but stops are not possible, for instance for a thermostat.

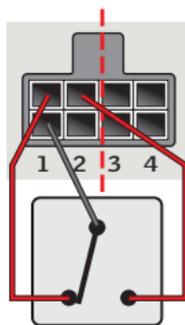

Function as interface


Registration of products

io-homecontrol® products must be registered in the interface to be operational. You can register and operate up to 200 products.

If you have a VELUX INTEGRA® two-way control pad KLR 200 (labelled with the symbol ) , you can copy the registered products from the control pad to the interface. See how on pages 12-16.



If you **only** have a VELUX INTEGRA® one-way control (labelled with the symbol ) , you can copy the products operated by this control to the interface. See how on pages 17-19.

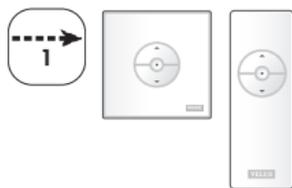

Note: If you have both a one-way and a two-way control, you can copy the registered products from both controls using VELUX INTEGRA® two-way control pad KLR 200.

Function as interface

Registration with VELUX INTEGRA® two-way control pad KLR 200

The illustrations below show how to copy the contents from control pad KLR 200 to interface KLF 200.



1



Connect the interface to the mains supply. When the light-emitting diode flashes yellow, the interface is ready for configuration.

2



Tap ⊕ on KLR 200.

3



Tap "New product".

Function as interface


Registration with VELUX INTEGRA® two-way control pad KLR 200

4




Tap "Copy control pad".

5

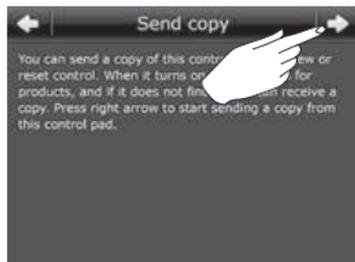

Tap ⇨ and continue to step 6.

6

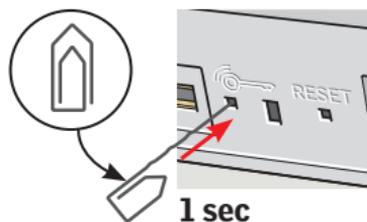

Press the  button on the back of the interface briefly (1 second) with a pointed object. The light-emitting diode flashes white.

7



Await green flash on the light-emitting diode and then continue to the next step.

Note: In case of red flash, repeat steps 2-6.

Function as interface

Registration with VELUX INTEGRA® two-way control pad KLR 200

The illustrations below show how to choose products from the control pad and how to assign them to inputs on the interface.

8




Tap ⊕ on KLR 200.

9



Tap "New product".

10

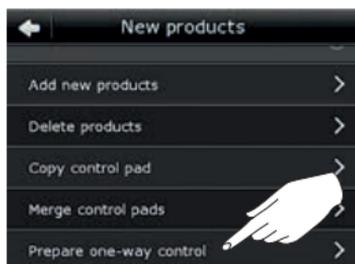

Tap "Prepare one-way control".

11



Tap "Add products".

12



Scroll down the display and choose the product(s) to be assigned to an input ①. The products **must** be of the same type.

Note: By tapping the icon, you can see whether you have chosen the intended products.

Tap ⇨ ②.

Function as interface


Registration with VELUX INTEGRA® two-way control pad KLR 200

13



Tick the chosen product(s) ①.
Tap ⇨ ②.

14

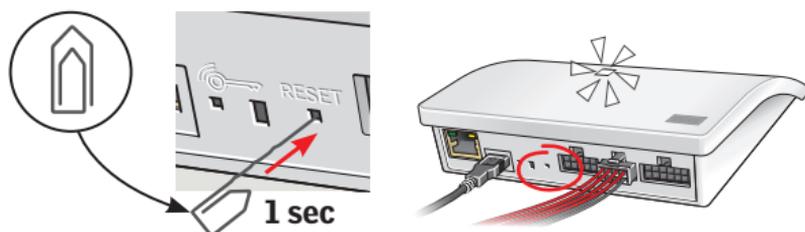

Connect the supplied wire bundle to the input terminal. Press the RESET button on the back of the interface briefly (1 second) with a pointed object. The light-emitting diode flashes white rapidly. Step 15 must now be carried out within 2 minutes.

Note: Take care that the red and black wire ends do not touch each other at this point, as they may short-circuit. A short-circuit will result in an unintended registration of products.


Function as interface

Registration with VELUX INTEGRA® two-way control pad KLR 200

15




1 sec

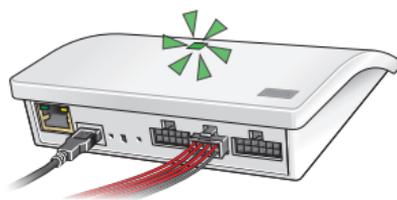

Short-circuit wires (1 second) in the double input which is to control the chosen product(s). It can take up to 1 minute before the light-emitting diode flashes green and the product(s) is/are assigned to the input terminal on the interface.

Note: When short-circuiting the same input again, previous configurations will be replaced. This means that if a product is to be added to a group which has already been configured, all the products in the group have to be added again.

16

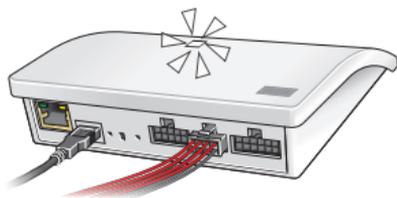

When the white light-emitting diode is on, interface KLF 200 has been configured as an interface. The configuration may take up to several minutes.

Note: If you want to add more products to the interface, repeat steps 9-15.


Function as interface

Registration with VELUX INTEGRA® one-way control

The illustrations below show how to copy the contents from a one-way control to interface KLF 200.




1

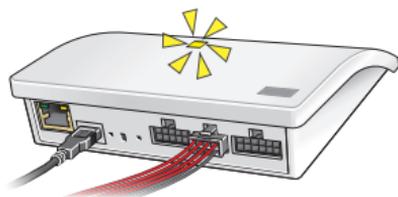


Connect the interface to the mains supply and connect the supplied wire bundle to the input terminal. When the light-emitting diode flashes yellow, the interface is ready for configuration.

2a

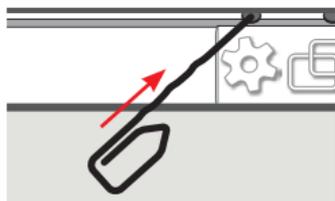

Press the  button at the bottom of the control with a pointed object.


2b

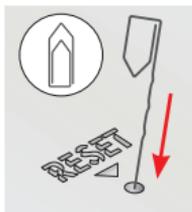

Press the RESET button on the back of the control for 10 seconds with a pointed object.

Function as interface

Registration with VELUX INTEGRA® one-way control

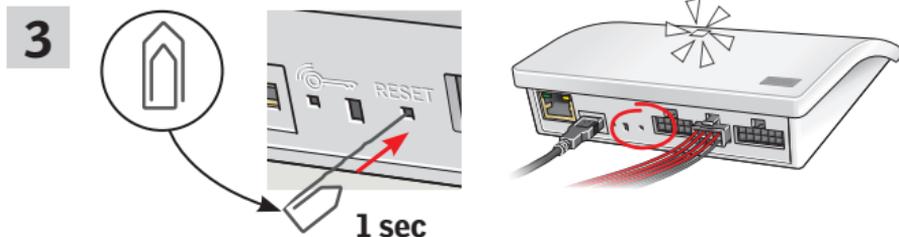

Press the RESET button on the back of the interface briefly (1 second) with a pointed object. The light-emitting diode flashes white. Step 4 must now be carried out within 2 minutes.




Short-circuit wires (1 second) in the double input which is to control the chosen product(s). The light-emitting diode flashes green.

Note: When short-circuiting the same input again, previous configurations will be replaced. This means that if a product is to be added to a group which has already been configured, all the products in the group have to be added again.

Function as interface

Registration with VELUX INTEGRA® one-way control

5

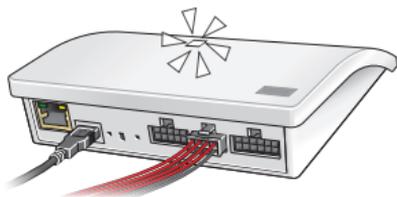


When the white light-emitting diode is on, interface KLF 200 has been configured as an interface.

Note: If you want to add more products to the interface, repeat steps 1-4.

Function as interface


Function of outputs

The output function is used together with an intelligent building installation (IBI) to get feedback from KLF 200. The output function gives the user feedback as to whether an action has been executed, eg if the window has been closed. As feedback, the built-in output relay is activated for 2 seconds.

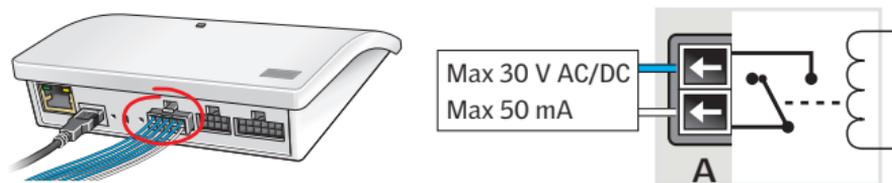

Intelligent building installations

io-homecontrol® products can be combined with most intelligent building installations (IBI). The IBI system must include an output module with one or more programmable outputs. When the outputs from the IBI have been connected to the input terminals on the interface, the relevant io-homecontrol® products can be controlled via the interface. With two outputs it is possible to control both of the functions ▲ and ▼ in an io-homecontrol® product or a group of io-homecontrol® products.

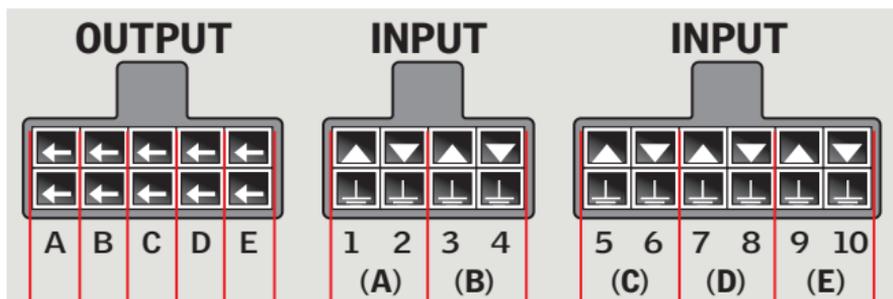


OUTPUT A connects to **INPUT 1** and **2**.

OUTPUT B connects to **INPUT 3** and **4** etc.

Function as interface

Resetting

When resetting, **all** settings will be deleted and the interface reset to factory settings.

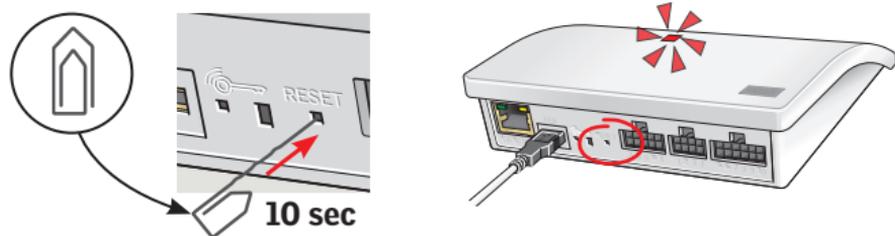

Press the RESET button on the back of the interface for 10 seconds with a pointed object until the red light-emitting diode is on. After this, the light-emitting diode will turn yellow followed by a red flash.



When the light-emitting diode flashes yellow, the interface has been reset. This may take up to 1 minute.

Function as repeater

The repeater function extends the operation range of controls in the system by transmitting received wireless commands. When used as a repeater, the interface is therefore to be placed approximately halfway between the controls and the io-homecontrol® products to be operated.

The repeater function must be registered in two-way controls as if it were a product in the same way as other io-homecontrol® products.

Note: The repeater function cannot be used with one-way controls.

The example shows how the repeater function is activated in the interface and registered in a two-way control pad KLR 200.

Note: Up to three interfaces in a system can be set to repeater function.

The operation range of controls cannot be extended further in the same direction by placing more repeaters after each other as commands can be sent only via one repeater.



1



Connect the interface to the mains supply. When the light-emitting diode flashes yellow, the interface is ready to be configured.

Function as repeater

2




Tap ⊕ on KLR 200.

3




Tap "New product".

4

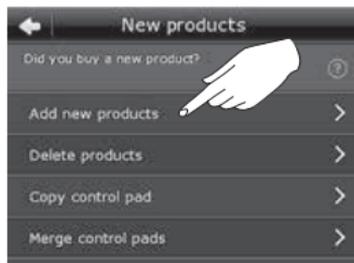

Tap "Add new products".

5

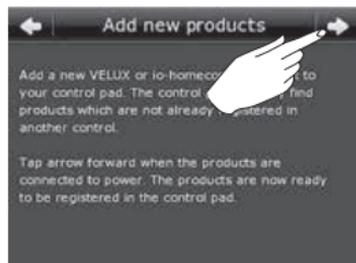

Tap ⇨.

Function as repeater

6 Now, one of the two images below (**A** or **B**) will appear on the display:




If this image appears, tap ⇨ when the control pad has found the products.
You can now operate the products.



If this image appears, turn off the control pad.
You can now operate the products.



When the blue light-emitting diode is on, the interface is configured as a repeater.

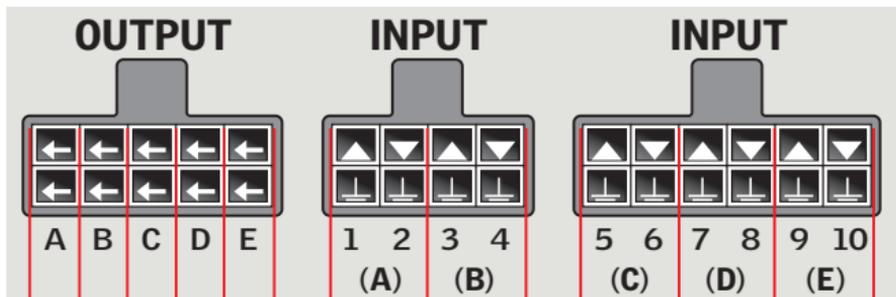

	Product
A	
B	
C	
D	
E	
1 2	
3 4	
5 6	
7 8	
9 10	

VELUX®

- AR:** VELUX Argentina S.A.
348 4 639944
- AT:** VELUX Österreich GmbH
02245/32 3 50
- AU:** VELUX Australia Pty. Ltd.
1300 859 856
- BA:** VELUX Bosna i Hercegovina d.o.o.
033/626 493, 626 494
- BE:** VELUX Belgium
(010) 42.09.09
- BG:** ВЕЛУКС България ЕООД
02/955 99 30
- BY:** Унитарное предприятие
"ВЕЛЮКС Мансардные Окна"
(017) 329 20 89
- CA:** VELUX Canada Inc.
1 800 88-VELUX (888-3589)
- CH:** VELUX Schweiz AG
062 289 44 45
- CL:** VELUX Chile SpA
2 953 6789
- CN:** VELUX (CHINA) CO. LTD.
0316-607 27 27
- CZ:** VELUX Česká republika, s.r.o.
531 015 511
- DE:** VELUX Deutschland GmbH
040 / 54 70 70
- DK:** VELUX Danmark A/S
45 16 45 16
- EE:** VELUX Eesti OÜ
621 7790
- ES:** VELUX Spain, S.A.U.
91 509 71 00
- FI:** VELUX Suomi Oy
0207 290 800
- FR:** VELUX France
0806 80 15 15
Service gratuit + prix appel
- GB:** VELUX Company Ltd.
01592 778 225
- HR:** VELUX Hrvatska d.o.o.
01/5555 444
- HU:** VELUX Magyarország Kft.
(06/1) 436-0601
- IE:** VELUX Company Ltd.
01 848 8775
- IT:** VELUX Italia s.p.a.
045/6173666
- JP:** VELUX-Japan Ltd.
0570-00-8141
- KR:** VELUX International (VELUX A/S)
+45 7632 9240
- LT:** VELUX Lietuva, UAB
(85) 270 91 01
- LV:** VELUX Latvia SIA
67 27 77 33
- NL:** VELUX Nederland B.V.
030 - 6 629 629
- NO:** VELUX Norge AS
22 51 06 00
- NZ:** VELUX New Zealand Ltd.
0800 650 445
- PL:** VELUX Polska Sp. z o.o.
(022) 33 77 000 / 33 77 070
- PT:** VELUX Portugal, Lda
21 880 00 60
- RO:** VELUX România S.R.L.
0268-402740
- RS:** VELUX Srbija d.o.o.
011 20 57 500
- RU:** ЗАО ВЕЛЮКС
(495) 640 87 20
- SE:** VELUX Svenska AB
042/20 83 80
- SI:** VELUX Slovenija d.o.o.
01 724 68 68
- SK:** VELUX Slovensko, s.r.o.
(02) 33 000 555
- TR:** VELUX Çati Pencerelei
Ticaret Limited Şirketi
0 216 302 54 10
- UA:** ТОВ "ВЕЛЮКС Україна"
(044) 2916070
- US:** VELUX America LLC
1-800-88-VELUX

www.velux.com